

CALIBRATING A TEMPO WALK

Calibrating the Tempo Walk allows the unit to travel centered on the golfer and at the appropriate following distance (48”).

1. **Always calibrate the unit on a flat and level surface.**
2. Place a tape measure extending straight from the front nose of the unit for 48” (see table below). Make sure the tape is centered on the unit (see table below).
3. Power on the unit and press the neutral button steadily until you hear the voice audio “Calibration Mode”
4. Quickly move to straddle the measuring tape, with your heels at the 48” mark. Your back should be facing the unit and you must stand still during calibration process.
5. The transmitter should be turned on and it should be centered on your waist in the middle of your back.
6. Wait for the unit to successfully complete its calibration, which will be signaled by several quick chimes. You must wait until these chimes end before you move. It is now ok to turn off the transmitter.
7. Should you hear repetitive gongs it means the calibration was unsuccessful. Possible reasons for this are as follows:
 - a. Transmitter isn’t charged properly (Green light flashing or off)
 - b. Transmitter isn’t turned on during calibration, or the unit is not turned on.
 - c. The Channels between Tempo Walk (abbreviated: TW) and transmitter aren’t the same.
 - d. Make sure no other transmitters or units are ON.
8. Once these conditions are corrected you can repeat steps 1-6 to re-calibrate the unit
9. Test the unit tracking by walking it around to make sure that the Tempo Walk is following correctly, both following distance (48”) and tracking centered on the transmitter.

