

TEMPO WALK TABLET Samsung Galaxy Tab 8.0 (Verizon)

Initial Tablet Setup

1. Power On the Tablet (hold button on top left).
2. Select gear at the top right of operating instructions screen (Password: 6456 - Submit).
3. Select "Location Setup" from left column, and then type in the course name you want to find in the search box. Be patient it may take up to 60 seconds for the file to be located.
4. Select the desired course file that is displayed below the course search field (Hit Save, then ok).
5. Verify that this is done correctly:
6. Select "Exit" tab from the left column when finished.
7. Press the "Start" button and hole selection to confirm tablet has been set up correctly.

***If you cannot locate the course file by name and/or city, reach out to your Club Car representative or search for the course at <https://skydroid.net/courses.php>.*

*If it is not preloaded, Club Car will need to map the course, which may take a couple days. When this is finished follow these instructions on how to download a file via WiFi***

WiFi Download Method

1. Tap the Screen 7x quickly (use multiple fingers)
 - a. **Exit passcode 3897**
 - b. Press the "Stop Kiosk Mode" button (bottom middle)
 - c. Disable Kiosk Mode to confirm.
2. Select the 4x4 white grid icon on the bottom right of the screen. (All Applications)
3. Find and Select the Settings App
 - a. Navigate to the WiFi settings
 - b. **Connect to WiFi or your phone's mobile hotspot**
4. Press Tablet's Home button
5. Select the 4x4 white grid icon on the bottom right of the screen. (All Applications)
6. Find and Select the Fully Single App Kiosk
 - a. Select the "Start Kiosk Mode" button.
 - b. Disable Test Mode then select Yes.
 - c. Select Fully Single App Kiosk and select "Always" for the default launcher
7. Within the Tempo Walk App
 - a. **Navigate to Gear Icon, then enter passcode 6456**
 - b. Select "Location Setup" tab on the left side.
 - i. When the data fields load, scroll to bottom of screen
 - ii. Press the "Download A Course" button
 - iii. Navigate to the correct course
 1. Note: This course will need to be mapped first, so contact Club Car contact to make sure this is completed.
 - iv. Select "Save" button on top of screen
 1. Press OK to confirm
 - c. Select "Exit" tab on the left side (you may need to scroll screen up to see this).

- d. Verify that course file loaded correctly
 - i. Press Start button on Operating Instructions page
 - ii. Select 9/18 holes
 - iii. Verify course name is correct (top left)

How to use the tablet

1. On the Operating Instructions Screen select the TUTORIAL button to watch the training video.
2. On the Operating Instructions Screen select the START button to view course yardages.
3. Optional: For courses with multiple courses or 9's, select the correct course/9 first (highlight in green)
4. Select the desired number of holes to play: 9/18
5. Begin playing your round.
6. **If you do not get within 25 yards of the green, the tablet will not auto advance to the next hole.**
 - a. If this happens just select the Previous or Next buttons to navigate to the correct hole.
7. When you are finished, press the "end round" button.

How to Remove and Replace the tablet

1. Unclip the front plastic screen protector on sides of tablet
2. Push back the rubber gasket around the tablet case edges.
3. Remove the tablet.

Tip: Be gentle when removing the tablet so that the charge cable doesn't get damaged.

4. Plug in the micro USB cable using the right orientation into the new tablet.

Tip: You may need to reach from inside the Tempo Walk to plug in the charger cable securely.

5. Slide the tablet into the case, with the charger side first.
6. Make sure that the tablet is charging (top right of screen)

Tip: The battery icon will have a lightning bolt in it or say 100%.

7. Secure the rubber gasket around the tablet case edges.
8. Replace the plastic screen protector. Tip: Start with the top left tab placement.

Troubleshooting the Tablet

Yardages are not accurate (Note: It can take up to 30 seconds for tablet to show accurate yardage)

1. Check to see if the GPS location icon is on, it looks like an upside-down teardrop (located on the top right of the tablet screen).
 - a. If this is flashing, the tablet is trying to connect to the GPS satellites. Give it a moment.
 - b. If the icon is missing, you may need to reset the tablet so that it can function correctly again.

Simply hold the power button down until the reset option pops up. Then press reset.

Black Screen

1. Check to see if the tablet is powered on by pressing the power button on the top left of the tablet.
 - a. If the screen lights up, swipe your finger up from the bottom of the screen to unlock the tablet and use it as normal.
 - b. If this does not work, look to see if the tablet charge cable is still plugged in.
 - i. Remove the tablet and make sure the cable is snug in the charge port.
 - ii. Note: You may also want to plug the tablet into a wall outlet and charge it up to