



# CONTROLS AND INDICATORS

See General Warnings on page 7.

## **⚠ WARNING**

- If renting or loaning the unit, make sure the operator is familiar with all controls and operating procedures before allowing the cart to be used.
- Do not turn towards the unit when the unit is connected to the transmitter.
- Always bring the cart to a full stop before turning off the transmitter.
- When Tempo Walk is in the neutral position, the unit has no brakes and will not connect to the transmitter.
- Always put the unit back into the run position to operate with the transmitter.
- The transmitter will immediately stop the unit if its power switch is turned off (see figure 8)

The dashboard is located on the driver side of Tempo Walk, push the power button to turn the unit off and on, see (Figure 7) you will hear a brief chime when the cart turns on. The unit is in “neutral” when the blue LED light is lit, and is in the “run” position when the LED light is not lit.

|  |  |
|--|--|
|  |  |
| <p><b>Figure 7 Dashboard (On/Off/Neutral)</b></p>                                  | <p><b>Figure 8 Transmitter Toggle Switch (On/Off)</b></p>                            |

### **Battery Low State-of-Charge Warning**

- When the LED lights on the dashboard are red, the unit must be recharged.
- When the unit is turned on, if you hear the voice audio, “Low Battery”, the unit should not be used and must be recharged.

## **CAUTION**

- When the LED lights indicate a low state of charge, the unit should be placed on a charge as soon as possible.