

## Club Car Tempo Walk Winterization Procedures

### **Warning**

- **Never attempt to charge a frozen battery. Frozen batteries can explode, discard battery. TW must never be charged when the temperature is below freezing.**
- **Never store the TW unit in a location that gets colder than (-0C ~ 32F)!**
- **Discontinue ProSeriesCharger use if the battery becomes excessively warm.**

### Winter Storage Requirements

1. TW must be fully charged before storing.
2. Unit power must be turned off.
3. Circuit breaker under cooler must be disconnected for winter storage (see video), or any time the storage temperature is below freezing
4. Remove the tablet from TW, power it off (see video), and store indoors.
5. TW should not be connected to the ProSeries charger during storage.
6. TW must be recharged within 6 months to maintain battery integrity.
7. Unit should be stored in a dry, clean, well ventilated area, between (0-45C/32-113F)

### Winter Battery Charging Requirements

1. Follow all of the safety precautions in the ProSeries Product information Guide and User guide (contact Club Car if you need a copy of either publication).
2. Acceptable battery charging temperatures are (0-40C/32-104F).
3. Should the temperature drop below (10C/50F) use the 24 Volt Cold/AGM charging mode setting on the ProSeries Charger.

### Spring Reactivation Procedures

1. Connect the unit to the ProSeries charger and recharge TW overnight.
2. When the unit is charged, reconnect the circuit breaker, located under the cooler.
3. Reattach the tablet to unit (make sure it's fully charged), as well as charging cable, and power the tablet on.
4. Power on TW in a safe/open area to test performance.